



Air Pressure Adjustment

NOTE: Individual handpiece pressure adjustments are located at the bottom rear of the control head. To adjust the pressure to each handpiece, turn the adjustment screw clockwise to decrease the pressure and counter-clockwise to increase the pressure.

CAUTION: When adjusting the handpiece pressure, do not overtighten the screws. This may result in unnecessary damage to the handpiece control block and is not covered under the SDS warranty.