



To Locate the Serial Number of your Cuspidor, please remove the Access Panel of the Cuspidor's Post Mounted Junction Box and refer to the Diagram Above.